

XV-152 MICRO PANEL



EATON
Powering Business Worldwide

Manufacturer

Eaton Automation AG
Spinnereistrasse 8-14
CH-9008 St. Gallen
Switzerland
www.eaton-automation.com/en
www.eaton.com

Support**Region North America**

Eaton Corporation
Electrical Sector
1111 Superior Ave.
Cleveland, OH 44114
United States
877-ETN-CARE (877-386-2273)
www.eaton.com

Other regions

Please contact your local supplier or send an Email
to: automation@eaton.com

Original instructions

The German version of this document is the original instructions.

Translations of the original instructions

All non-German editions of this document are translations of the original instructions.

Editor

Monika Jahn

Brand and product names

All brand and product names are trademarks or registered trademarks of the owner concerned.

Copyright

© Eaton Automation AG, CH-9008 St. Gallen

All rights reserved, also for the translation.

None of this document may be reproduced or processed, duplicated or distributed by electronic systems in any form (print, photocopy, microfilm or any other process) without the written permission of Eaton Automation AG, St. Gallen.

Subject to modifications.

Contents

1	General	5
1.1	Purpose of these Operating Instructions.....	5
1.2	Comments about this document.....	5
1.3	Additional documentation.....	5
2	Device description	7
2.1	Function.....	7
2.2	Intended use.....	7
2.3	Device versions.....	8
2.4	Package contents.....	9
2.4.1	5.7" and 8.4" devices.....	9
2.4.2	10.4" devices.....	9
2.5	Accessories.....	9
2.6	Designation.....	10
3	Safety regulations	11
3.1	General.....	11
3.2	Meaning of symbols.....	12
3.3	Mandatory requirements, personnel.....	13
3.3.1	Work safety.....	13
3.3.2	Qualification of personnel.....	13
3.3.3	Operating Instructions.....	13
3.3.4	Installation, maintenance and disposal.....	13
3.3.5	Prohibited use.....	13
3.3.6	Requirements for proper operation.....	14
3.4	Device related hazards.....	15
4	Operating and indication elements	19
4.1	Operating and indication elements on the front.....	19
4.2	Operating elements on the service side.....	20
5	Installation	21
5.1	Safety regulations.....	21
5.2	Requirements for the place of installation.....	22
5.2.1	Requirements for the mounting position.....	22
5.3	Cable preparation.....	23
5.3.1	Overview of interfaces.....	24
5.3.2	Preparation of cables with D-Sub connector.....	25
5.3.3	Power supply.....	27
5.3.4	RS232 (System Port).....	28
5.3.5	Ethernet.....	29
5.3.6	USB Device.....	30
5.3.7	USB Host.....	30
5.3.8	CAN.....	31
5.3.9	Profibus.....	34
5.3.10	RS485.....	36

Contents


5.4	Mounting	38
5.4.1	Mounting the device	39
6	Operation	43
6.1	Safety regulations	43
6.2	Starting the device	44
6.3	Switching off the device	44
6.4	Inserting and removing an SD card	45
7	Maintenance and service	47
7.1	Safety regulations	47
7.2	Maintenance	48
7.2.1	Cleaning the resistive touch	48
7.2.2	Recalibrating a resistive touch	48
7.2.3	Battery	48
7.3	Service	49
7.3.1	Repairs	49
7.4	Troubleshooting	50
8	Storage, transport and disposal	51
8.1	Safety regulations	51
8.2	Storage	51
8.3	Transport	51
8.4	Disposal	52
9	Technical data	53
9.1	Dimensions and weights	53
9.1.1	5.7" devices	53
9.1.2	8.4" devices	54
9.1.3	10.4" devices	55
9.2	Display	56
9.3	Touch sensor	56
9.4	System	57
9.5	Interfaces	57
9.5.1	Power supply	58
9.6	Enclosure ratings	59
9.7	Agency approvals and standards	59
9.8	Applicable standards and regulations	59
9.9	Ambient conditions	60



1 General

1.1 Purpose of these Operating Instructions

These Operating Instructions contain the information required for the correct and safe use of the MICRO PANELs XV-152. The Operating Instructions are part of the devices and must therefore be kept nearby.

These Operating Instructions describe all aspects of the devices: transport, installation, commissioning, operation, maintenance, storage and disposal. The operating system and the application software are not described.

 **Read Chapter 3 Safety regulations, 11 before working with the device. This contains important information for your personal safety. This chapter must be read and understood by all persons working with this device.**

 WARNING	
	<p>Incomplete copy of the Operating Instructions</p> <p>Working with individual pages of these Operating Instructions may cause damage to property or personnel by failure to observe safety-related information.</p> <p>▶ Always work with the complete document.</p>

1.2 Comments about this document

Please send any comments, recommendations or suggestions relating to this document to info-automation@eaton.com.

1.3 Additional documentation

The following documents may be helpful in the use of the device in addition to this document. These can be downloaded from our home page (www.eaton-automation.com/en), «DOWNLOADS» section.

- [1] MN04802013Z-EN Quick Start Guideline XV100
(commissioning the MICRO PANEL, establishing communication with the programming PC and creating projects with GALILEO and MXpro)
- [2] MN05010007Z-EN System Description Windows CE
(operation of the Windows CE operating system on MICRO PANELs)
- [3] MN05010009Z-EN System Description Networks in Brief
(information on networks in general and on the integration of PCs and MICRO PANELs in networks)

1 General

1.3 Additional documentation

2 Device description

2.1 Function

MICRO PANELs XV-152 can be used as HMI devices or as integrated HMI/PLC devices.

2.2 Intended use

MICRO PANELs XV-152 are primarily used in machine and system building. They are designed exclusively for the visualization, operation and control of machines and systems. Any other use must be agreed beforehand with the manufacturer.

2 Device description

2.3 Device versions

2.3

Device versions



Fig. 1 XV-152

MICRO PANELs XV-152 are available in the following versions:

Basic device	Display	Communication interfaces	XV-152 type
Version D: ■ 1 Slot for 1 SD card ■ Integrated interfaces: 1 × Ethernet 100/10 1 × USB Device 1 × USB Host Communication interfaces ■ Windows CE Core 5.0 license (incl.)	Resistive touch, 5.7" TFT-LCD, 64k colors, VGA	RS232	XV-152-D0-57TVR...
		RS485 and RS232	XV-152-D4-57TVR...
		CAN, RS485 and RS232	XV-152-D6-57TVR...
		Profibus, RS485 and RS232	XV-152-D8-57TVR...
	Resistive touch, 8.4" TFT-LCD, 64k colors, VGA	RS232	XV-152-D0-84TVR...
		RS485 and RS232	XV-152-D4-84TVR...
		CAN, RS485 and RS232	XV-152-D6-84TVR...
		Profibus, RS485 and RS232	XV-152-D8-84TVR...
	Resistive touch, 10.4" TFT-LCD, 64k colors, VGA	RS232	XV-152-D0-10TVR...
		RS485 and RS232	XV-152-D4-10TVR...
		CAN, RS485 and RS232	XV-152-D6-10TVR...
		Profibus, RS485 and RS232	XV-152-D8-10TVR...

Tab. 1 Device versions

2.4 Package contents

The accessories supplied with the MICRO PANELs XV-152 depend on the size of the device.

2.4.1 5.7" and 8.4" devices

Qty	Designation
1	MICRO PANEL: ■ XV-152-D...-57TVR... or ■ XV-152-D...-84TVR...
4	Retaining brackets with threaded pin for mounting the device
1	Sealing strip for mounting the device
1	Power supply connector
1	Stylus

Tab. 2 Package contents for 5.7" and 8.4" devices

2.4.2 10.4" devices

Qty	Designation
1	MICRO PANEL: ■ XV-152-D...-10TVR...
6	Retaining brackets with threaded pin for mounting the device
1	Sealing strip for mounting the device
1	Power supply connector
1	Stylus

Tab. 3 Package contents for 10.4" devices

2.5 Accessories

Different accessories are available.



Order the accessories required from your supplier. Required accessories for:

- **Mounting with increased protection class:**
See Chapter 9.6 Enclosure ratings, 59.
- **Use in a potentially explosive atmosphere:**
See Chapter 9.7 Agency approvals and standards, 59.

2 Device description

2.6 Designation

2.6

Designation

Nameplate

A nameplate is fixed on the rear of the device in order to identify it. The nameplate contains the following information:

- Manufacturer address
- Type designation
- Power supply required
- Part no.
- Serial no.
- Time of manufacturing (week/year)
- Approval marks
- Arrangement of interfaces and operating elements
- Permissible mounting options (top edge «Top»)

Support

To ensure fast and optimum support always provide the support personnel with the following information on the nameplate:

- Part no. (Part-No or Art.-No)
- Serial no.

3 Safety regulations

3.1 General

Hazards may still occur even though the device meets the current state of the art and complies with all recognized safety requirements.

The device must only be installed and commissioned in perfect technical condition and in compliance with this document.










Read this chapter before working with the device. This contains important information for your personal safety. This chapter must be read and understood by all persons working with this device.

3.2

Meaning of symbols

The following symbols are used in this document according to the hazard level described:

 DANGER	
	Signal word DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	
	Signal word WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	
	Signal word CAUTION Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
CAUTION	
	Signal word CAUTION without safety alert symbol Indicates a situation which, if not avoided, could result in material damage.

 **Indicates useful information.**

The danger symbol used and the text indicate the actual danger and the related preventative measures.

3.3 Mandatory requirements, personnel

3.3.1 Work safety



All applicable work safety regulations (in-house and national) must be observed.

3.3.2 Qualification of personnel

The personnel responsible for installation, operation, maintenance and service must be adequately qualified. These persons must be sufficiently trained or instructed and they must be informed of all hazards and risks associated with the device.

3.3.3 Operating Instructions

It must be ensured that any person working with the device in any phase of its lifespan has read and understood the relevant sections of the Operating Instructions.

 WARNING	
	<p>Incomplete copy of the Operating Instructions</p> <p>Working with individual pages of these Operating Instructions may cause damage to property or personnel by failure to observe safety-related information.</p> <p>▶ Always work with the complete document.</p>

3.3.4 Installation, maintenance and disposal

It must be ensured that the device is properly connected, mounted, maintained and disposed of in compliance with all relevant standards and safety regulations.

3.3.5 Prohibited use

The implementation of safety functions (relating to the protection of personnel and machinery) using the device is prohibited.

3 Safety regulations

3.3 Mandatory requirements, personnel

3.3.6

Requirements for proper operation

The following points must be observed so that the device meets the contractual requirements:

- Only qualified personnel may work with the device.
- These persons must have read the Operating Instructions and must observe the requirements described.
- The ambient conditions stated must be observed. See Chapter 9.9 Ambient conditions, 60.
- The maintenance work must be carried out correctly.

No liability is accepted for damage, consequential damage and accidents caused by the following:





- Failure to observe work safety regulations
- Failure or malfunction of the device
- Improper handling or use
- Failure to observe the Operating Instructions
- Conversions, modifications and repairs to the device



Repairs, see Chapter 7.3.1 Repairs, 49.

3.4

Device related hazards

⚠ DANGER	
	<p>Explosion hazard</p> <p>Death, serious injury or material damage may occur if an electrical plug connection is removed in a potentially explosive atmosphere during operation or if the device is subjected to hazardous knocks.</p> <ul style="list-style-type: none">▶ Only use the device in the following environments:<ul style="list-style-type: none">- Environments not subject to explosion hazards- Potentially explosive atmosphere, Zone 22 (according to ATEX 94/9/EC)▶ Prevent the device from being subjected to hazardous knocks.▶ Only operate the device in potentially explosive atmospheres if it is correctly mounted.▶ Switch off the device before removing the plug connections.
⚠ WARNING	
	<p>Live parts in the device</p> <p>When the device is opened, there is a risk of electric shock if live parts are touched.</p> <ul style="list-style-type: none">▶ The device must not be opened.
⚠ WARNING	
	<p>Potential equalization currents</p> <p>Large equalization currents between the protective ground systems of different devices may cause operational malfunctions due to signal interference and may even cause fires.</p> <ul style="list-style-type: none">▶ If necessary, a potential equalization conductor should be installed parallel to the cable. This should have a cross-section that is a multiple of the cable shield.
⚠ CAUTION	
	<p>Electrostatic discharge</p> <p>Electrostatic discharge may damage or destroy electronic components.</p> <ul style="list-style-type: none">▶ Avoid contact with components (such as connector pins) that are susceptible to electrostatic discharge.▶ Discharge (by touching a grounded metal object) any static charge accumulated in your body before touching the device.

3 Safety regulations

3.4 Device related hazards

CAUTION



Non-isolated interfaces

The device may be damaged due to potential differences.

- ▶ The GND terminals of all bus stations must be connected.

CAUTION



Sensitive resistive touch surface

Damage to the resistive touch due to the use of pointed or sharp objects.

- ▶ Only activate the resistive touch with your finger or a stylus.
- ▶ When wearing gloves, ensure that these are clean. They must not be covered with abrasive dust or sharp particles.

CAUTION



Data loss

During a write operation, the SD card may lose data or may be destroyed if it is removed or if there is a power failure.

- ▶ Only insert the SD card when the device is in a de-energized state.
- ▶ Avoid write operations to SD cards. Reasons:
 - The number of write cycles possible on SD cards is limited.
 - A power failure during write operations will most likely lead to loss of data.
- ▶ Only remove the SD card when the device is in a de-energized state.
- ▶ Before switching off, ensure that no software write operations to the SD card are in progress.

CAUTION



Device condensation

If the device is or was exposed to climatic changes (temperature fluctuation, air humidity) moisture can form on or in the device (device condensation). In this case, there is a risk of short-circuit.

- ▶ The device must **not** be switched on when device condensation is present.
- ▶ If condensation is present on the device, or if it was exposed to temperature fluctuations, it must be allowed to adjust to room temperature (do not expose the device to the direct heat of heating devices) prior to commissioning.

CAUTION



Cleaning the device

Damage to the device due to the use of pointed or sharp objects or by liquids.

- ▶ Do not use any pointed or sharp objects (e.g. knife) for cleaning.
- ▶ Do not use any aggressive or abrasive cleaning agent or solvent.
- ▶ Avoid any liquid entering the device (risk of short-circuit).

3 Safety regulations

3.4 Device related hazards

4 Operating and indication elements

4.1 Operating and indication elements on the front



Fig. 2 Operating and indication elements on the front

The device has the following operating and indication elements on the front:

Element	Function
A Touch sensor	Resistive touch: Detection of the actuation of the operating elements shown on the display. These devices are operated by touching the operating elements with your finger or with a stylus.
B Display	Display operating and indication elements.

Tab. 4 Operating and indication elements on the front

4 Operating and indication elements

4.2 Operating elements on the service side

4.2 Operating elements on the service side

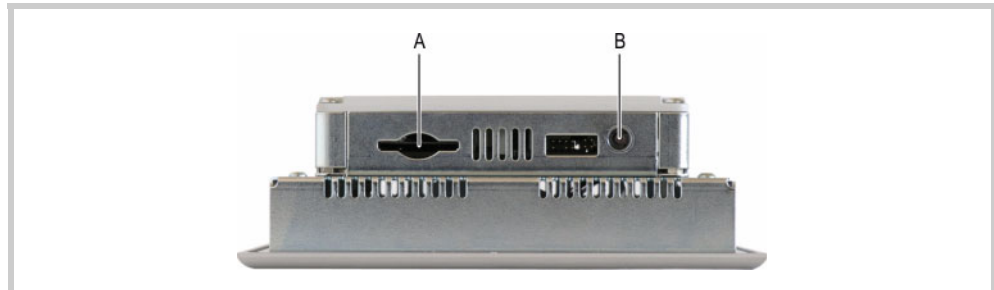


Fig. 3 Operating elements on the service side

The device has the following operating elements on the service side:

Element	Function
A SD slot 0	Slot for SD card.
B Control button	Function depends on the software used.

Tab. 5 Operating elements on the service side

5 Installation

5.1 Safety regulations



Read Chapter 3 Safety regulations, 11 before installing and commissioning the device. This contains important information for your personal safety.

5 Installation

5.2 Requirements for the place of installation

5.2

Requirements for the place of installation

- Approvals:
The device must only be used in locations that are approved for the device. See the markings on the nameplate and Chapter 9 Technical data, 53.
- Power supply:
The power supply must comply with the requirements stated in Chapter 9.5.1 Power supply, 58.

5.2.1

Requirements for the mounting position

The device is designed for mounting in control cabinets, control panels or control desks. It can be mounted horizontally or vertically. The following requirements must be fulfilled when selecting a suitable mounting position:

- The display should not be exposed to direct sunlight (the UV component of sunlight reduces the lifespan of the device).
- If the device is to be used in potentially explosive atmospheres, the device must not be subjected to hazardous knocks.
- The operating elements on the service side of the device and the cable connections are accessible after the device has been mounted.
- The ambient conditions stated must be observed. See Chapter 9.9 Ambient conditions, 60.
- Sufficient ventilation (cooling) must be ensured by means of:
 - Clearance of at least 3 cm to the ventilation slots
 - Clearance of at least 15 cm from heat radiating components such as heavily loaded transformers
 - The expected temperatures should be within the permissible range. See Chapter 9.9 Ambient conditions, 60.
- Properties of the mounting surfaces:
 - Material thickness at the mounting cutout 2...5 mm
 - Flatness ≤ 0.5 mm
(this requirement must also be fulfilled when the device is mounted!)
 - Surface roughness $R_z \leq 120$

5.3

Cable preparation

The cables for wiring the device are not supplied with it.

WARNING



Potential equalization currents

Large equalization currents between the protective ground systems of different devices may cause operational malfunctions due to signal interference and may even cause fires.

- ▶ If necessary, a potential equalization conductor should be installed parallel to the cable. This should have a cross-section that is a multiple of the cable shield.

CAUTION



Operational malfunctions

Use of unsuitable or improperly prepared cables, as well as incorrect wiring will mean that neither the values stated in the technical data nor the electromagnetic compatibility (EMC) can be ensured.

- ▶ Only use cables prepared by specialists.
- ▶ The cables used must be prepared according to the interface description in this document.
- ▶ The wiring instructions for the relevant interface must be observed when wiring the device.
- ▶ Any generally applicable regulations and standards must be fulfilled.

CAUTION



Non-isolated interfaces

The device may be damaged due to potential differences.



- ▶ The GND terminals of all bus stations must be connected.

5 Installation

5.3 Cable preparation

5.3.1

Overview of interfaces

 The interfaces will vary depending upon the device version. See nameplate and Chapter 2.3 Device versions,  8.

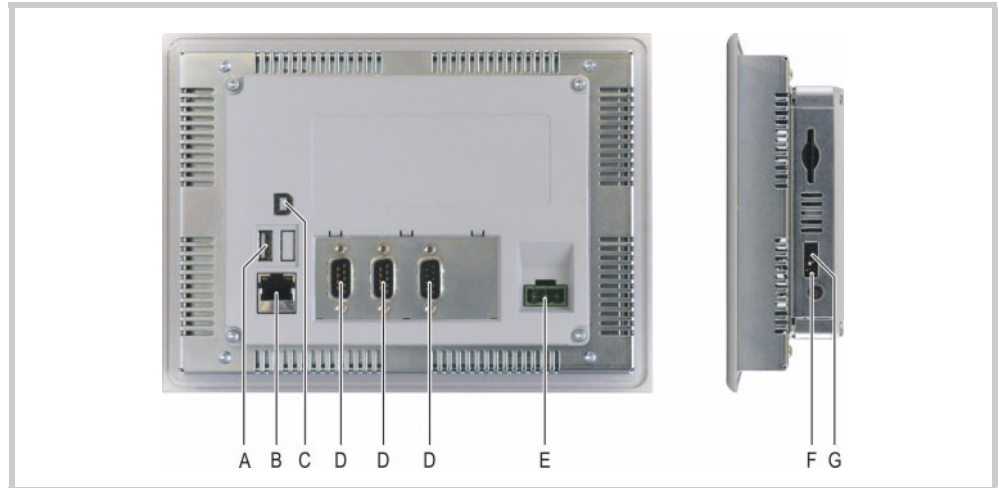










Fig. 4 Interfaces of the device

Interface	Interface description
A USB Host	→ Chapter 5.3.7,  30
B Ethernet	→ Chapter 5.3.5,  29
C USB Device	→ Chapter 5.3.6,  30
D Interfaces, depending on the device version:	
CAN	→ Chapter 5.3.8,  31
Profibus	→ Chapter 5.3.9,  34
RS232 (System Port)	→ Chapter 5.3.4,  28
RS485	→ Chapter 5.3.10,  36
E Power supply	→ Chapter 5.3.3,  27
F DIAG	Only for service tasks
G Jumper UPD/RUN	Only for service tasks

Tab. 6 Overview of interfaces

5.3.2

Preparation of cables with D-Sub connector

The preparation of bus cables is an essential factor in ensuring reliable operation and electromagnetic compatibility (EMC).

Wiring requirements

- The cables must be shielded.
- The cable shield must be made from a copper braid.
- The cable shield must make a low impedance connection with the connector casing over a large contact area. This is achieved by:
 - Use of metal or metallized connector casings with a cable clamp for strain relief.
 - The cable clamp must be screwed securely to the connector.

Connecting the cable shield

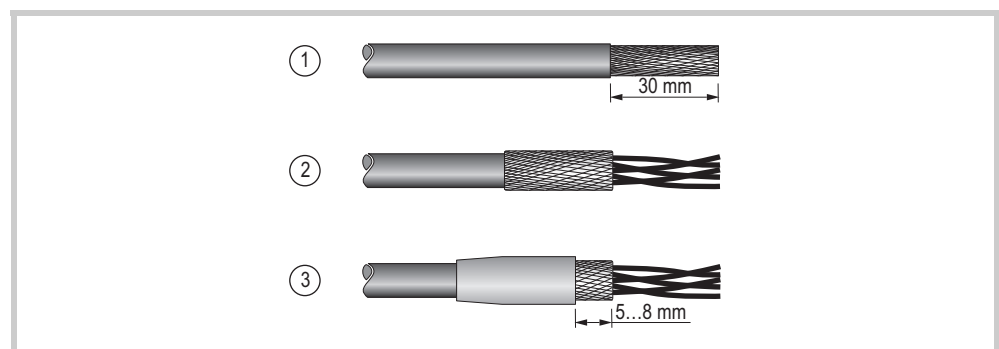


Fig. 5 Connecting the cable shield

- 1 Strip the cable end so that approx. 3 cm of the shield braid is exposed.
- 2 Fold back the shield braid over the cable shield.
- 3 Fit approx. 3 cm of heat shrinkable tubing over the folded back end of the shield braid or use a rubber grommet.
 - 5...8 mm of the shield braid must be exposed at the cable end.
 - The folded back shield braid end must be covered by the heat shrinkable tubing or by the rubber grommet.
- 4 Fit the D-Sub connector to the cable end:
 - The exposed metal shield braid must be clamped to the connector casing with the cable clamp.

5 Installation

5.3 Cable preparation

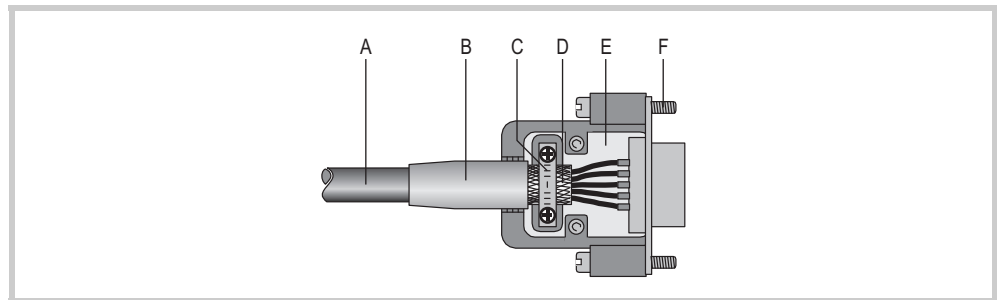


Fig. 6 Cable prepared with D-Sub connector

- | | |
|--|----------------------|
| A Cable with cable sheath | D Shield braid |
| B Heat shrinkable tubing or rubber grommet | E D-Sub connector |
| C Cable clamp | F Mounting screw UNC |



The EMC values stated in the technical data (immunity and emission) can only be guaranteed by observing the prescribed cable preparation!

5.3.3

Power supply

The device is provided with an internal fuse and is protected against polarity reversal. The functional earthing terminal is connected to both the housing and the 0 V terminal. The device power supply is **not** electrically isolated.

The device requires a 24 VDC power supply from an AC/DC converter with safe isolation (SELV). For other power supply requirements see Chapter 9.5.1 Power supply, 58.

- SELV (safety extra low voltage):
Circuit in which no dangerous voltage is present, even in the event of a single fault.



Fig. 7 Power supply interface

Wiring

- Phoenix Contact MSTB 2.5/3-ST-5.08 connector, Phoenix order no. 1757022 is supplied with the device.

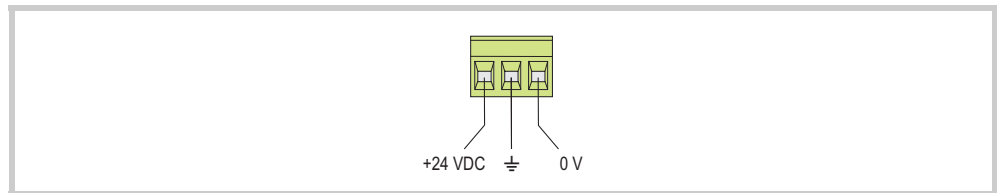


Fig. 8 Phoenix Contact MSTB 2.5/3-ST-5.08 connector (view from the wiring side)

Connection	Assignment
+24 VDC	+24 VDC power supply
⏏	Functional earthing connected to housing. Does not have to be connected.
0 V	0 V power supply (connected to ⏏)

Tab. 7 Assignment of connector

- The following must be observed when the connector wiring is prepared:

Preparing the wiring of the connector

Terminal type	Pluggable screw terminal
Cross-section	<ul style="list-style-type: none"> ■ min. 0.75 mm² / max. 2.5 mm² (lead or wire) ■ min. AWG18 / max. AWG12
Stripping length	7 mm

Tab. 8 Preparing the wiring of the connector

5 Installation

5.3 Cable preparation

5.3.4

RS232 (System Port)

The RS232 interface is **not** electrically isolated. The GND pin is directly connected to the housing potential.

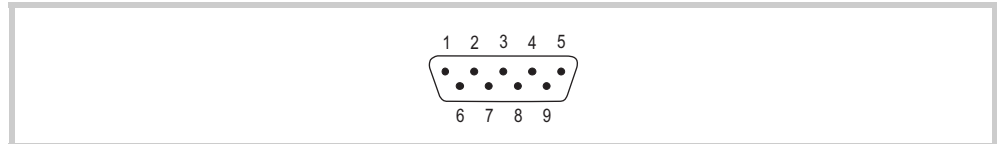


Fig. 9 RS232 interface (9-pin, D-Sub, male, UNC)

Pin	Signal	Assignment
1	DCD	Data Carrier Detected
2	RxD	Receive Data
3	TxD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Ground
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator


Tab. 9 Pin assignment of the RS232 interface

Wiring

- Shielded cables must be used.
- The maximum baud rate depends on the cable length:

Cable length	Max. baud rate
2.5 m	115200 Bit/s
5 m	57600 Bit/s
10 m	38400 Bit/s
15 m	19200 Bit/s
30 m	9600 Bit/s

Tab. 10 Relationship of cable length / baud rate

 **When preparing the cables, ensure that there is a low-resistance connection between the cable shield and the connector casing (→ Chapter 5.3.2, 25).**

5.3.5

Ethernet

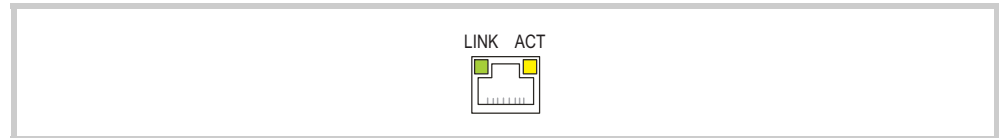


Fig. 10 Ethernet interface (RJ45 socket)

LED	Signal	Meaning
ACT (yellow)	flashes	Ethernet is active (data traffic)
LINK (green)	lit	Active network is connected and detected


Tab. 11 Control LEDs of the Ethernet interface

Cable

- Use shielded twisted pair cable (STP) for networking:
 - For device to device connection: crossover cable
 - For connecting to the hub/switch: 1:1 patch cable
- Maximum cable length: 100 m.

Ethernet interface in accordance with EIA/TIA 568 TSB-36.

CAUTION



Forces acting on the Ethernet interface

Communication can be disturbed and the connection mechanics damaged if the Ethernet interface is exposed to severe vibration or the RJ45 plug connection is pulled.

- ▶ Protect the RJ45 connection from severe vibration.
- ▶ Protect the RJ45 connection from pulling on the socket.

5 Installation

5.3 Cable preparation

5.3.6

USB Device

The USB Device interface supports USB 2.0.



Fig. 11 USB Device interface (USB Device, type B)

Cable

- Only use shielded USB standard cable.
- Maximum cable length: 5 m.

5.3.7

USB Host

The USB Host interface supports USB 2.0.




Fig. 12 USB Host interface (USB Host, type A)


Cable

- Only use shielded USB standard cable.
- Maximum cable length: 5 m.

5.3.8

CAN

The CAN interface is **not** electrically isolated.

CAUTION	
	<p>Non-isolated interfaces</p> <p>The device may be damaged due to potential differences.</p> <p>▶ The GND terminals of all bus stations must be connected.</p>

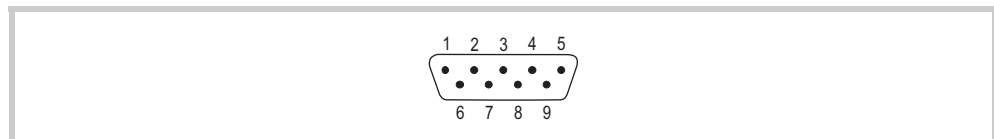


Fig. 13 CAN interface (9-pin, D-Sub, male, UNC)

Pin	Signal	Assignment
1	-	nc
2	CAN-L	Bus line (dominant low)
3	CAN-GND	CAN Ground
4	-	nc
5	-	nc
6	GND	Optional CAN Ground
7	CAN-H	Bus line (dominant high)
8	-	nc
9	-	nc

Tab. 12 Pin assignment of CAN interface in accordance with CiA

- ☞ ■ Pin 3 (CAN-GND) and 6 (GND) are connected internally in the device.
- nc: Pins 1, 4, 5, 8 and 9 must not be connected.
- The CAN bus drivers are fed internally with power.
- No power supply for third-party devices is implemented on the CAN connector.

5 Installation

5.3 Cable preparation

Wiring

- Shielded twisted pair cables must be used.

Cable specifications


Rated surge impedance	120 Ω
Permissible surge impedance	108... 132 Ω
Capacitance per unit length	< 60 pF/m
Core cross-section / max. cable length	≥ 0.25 mm ² / 100 m
	≥ 0.34 mm ² / 250 m
	≥ 0.75 mm ² / 500 m

Tab. 13 Cable specifications


- The maximum baud rate depends on the cable length:

Cable length	Max. baud rate
25 m	1000 Kbit/s
50 m	800 Kbit/s
100 m	500 Kbit/s
250 m	250 Kbit/s
500 m	125 Kbit/s
500 m	100 Kbit/s (adjustable via software)
1000 m	50 Kbit/s
2500 m	20 Kbit/s
5000 m	10 Kbit/s

Tab. 14 Relationship of cable length / baud rate

- 
 - **The use of repeaters is recommended with cables over 1000 m in length. Repeater can also be used to implement electrical isolation. Refer to the documentation of the repeater manufacturer for further information.**
 - **Observe the recommendations of the CiA (CAN in Automation).**
 - **When preparing the cables, ensure that there is a low-resistance connection between the cable shield and the connector casing (→ Chapter 5.3.2, 25).**

CAN bus topology

- A bus segment can connect up to 32 bus stations.
- Several bus segments can be linked via repeaters (bidirectional amplifiers). Refer to the documentation of the repeater manufacturer for further information.
- A bus segment must be provided with cable termination (120 Ω) at both ends. These terminations must be connected in the connector, directly between pin 2 and 7.
- 
 - **The bus segment must be terminated at both ends.**
 - **No more than two terminations must be provided on each bus segment.**
 - **Transmission faults can occur if operation is carried out without the correct termination.**

5 Installation

5.3 Cable preparation

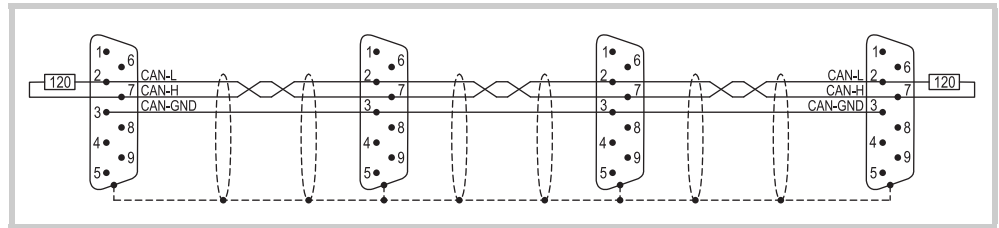


Fig. 14 Bus segment with four bus stations


5 Installation

5.3 Cable preparation

5.3.9

Profibus

The Profibus interface is **not** electrically isolated.

CAUTION	
	<p>Non-isolated interfaces</p> <p>The device may be damaged due to potential differences.</p> <p>▶ The GND terminals of all bus stations must be connected.</p>

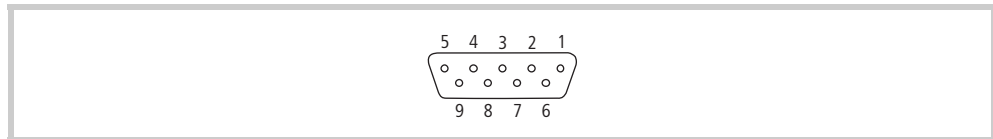



Fig. 15 Profibus interface (9-pin, D-Sub, female, UNC)

Pin	Signal	Assignment
1	-	nc
2	-	nc
3	B	EIA RS 485 line B
4	RTSAS	Output for controlling a repeater
5	M5EXT	0V output for external termination
6	P5EXT	5V output for external termination
7	-	nc
8	A	EIA RS 485 line A
9	-	nc

Tab. 15 Pin assignment of the Profibus interface

 **Pin 6 (5 V) must not be used as a power supply for external devices.**

Wiring

- Shielded twisted pair cables, cable type A (in accordance with Profibus standard EN50170) must be used.

Cable specifications	
Rated surge impedance	150 Ω
Permissible surge impedance	135... 165 Ω
Capacitance per unit length	< 30 pF/m
Loop resistance	< 110 Ω/km
Core cross-section	≥ 0.34 mm ² (22 AWG)

Tab. 16 Cable specifications

- The maximum baud rate depends on the cable length:

Cable length	Max. baud rate
200 m	1500 Kbit/s
400 m	500 Kbit/s
1000 m	187.5 Kbit/s
1200 m	≤ 93.75 Kbit/s

Tab. 17 Relationship of cable length / baud rate (for cables compliant with cable type A of the Profibus standard EN5017)

- ☞ **When preparing the cables, ensure that there is a low-resistance connection between the cable shield and the connector casing (→ Chapter 5.3.2, 25).**

Profibus topology

- A bus segment can connect up to 32 bus stations.
- Several bus segments can be linked via repeaters (bidirectional amplifiers). Refer to the documentation of the repeater manufacturer for further information.

- ☞ **The maximum cable length can be increased by using repeaters. Refer to the documentation of the repeater manufacturer for further information.**

- Only use bus terminal connectors that are specified for use in the Profibus network. They hold both bus cables on a bus station and ensure a low impedance connection of the cable shield to the shield reference potential of the bus station. These bus terminal connectors contain the Profibus cable termination that can be switched on as required.
- A bus segment must be provided with cable termination at both ends. The termination is passive and is fed from the bus station. It ensures a defined idle signal on the bus when no bus station is transmitting. These bus terminations should be implemented externally in the connector casing according to the Profibus standard (they can also be implemented with the bus terminating connector described above).

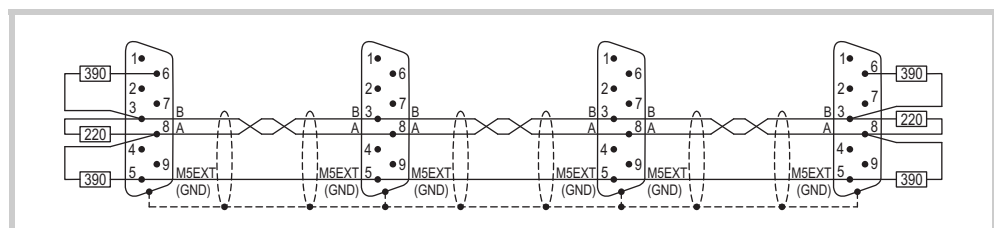


Fig. 16 Bus segment with four bus stations


- ☞
 - **The bus segment must be terminated at both ends.**
 - **No more than two terminations must be provided on each bus segment.**
 - **At least one of the two terminations must be fed by the bus station.**
 - **Transmission faults can occur if operation is carried out without the correct termination on the Profibus network.**

5 Installation
 5.3 Cable preparation

5.3.10

RS485

The RS485 interface is **not** electrically isolated. The GND pin is directly connected to the housing potential.

CAUTION	
	<p>Non-isolated interfaces</p> <p>The device may be damaged due to potential differences.</p> <p>▶ The GND terminals of all bus stations must be connected.</p>

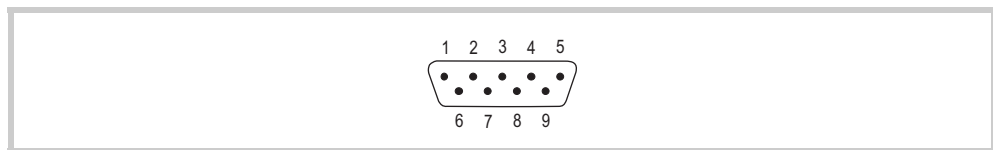



Fig. 17 RS485 interface (9-pin, D-Sub, male, UNC)

Pin	Signal	Assignment
1	-	nc
2	-	nc
3	B	Line B
4	-	nc
5	GND	Ground
6	-	nc
7	A	Line A
8	-	nc
9	-	nc

Tab. 18 Pin assignment of the RS485 interface


 **nc: Pins 1, 2, 4, 6, 8 and 9 must not be connected.**

Wiring

Shielded twisted pair cables must be used.


Cable specifications	
Rated surge impedance	120 Ω
Permissible surge impedance	108... 132 Ω
Max. cable length	1200 m
Possible baud rates	9600 Bit/s
	19200 Bit/s
	38400 Bit/s
	57600 Bit/s
	115200 Bit/s

Tab. 19 Cable specifications


 **When preparing the cables, ensure that there is a low-resistance connection between the cable shield and the connector casing (→ Chapter 5.3.2, 25).**

RS485 topology

- A bus segment can connect up to 32 bus stations.
- Several bus segments can be linked via repeaters (bidirectional amplifiers). Refer to the documentation of the repeater manufacturer for further information.

 **The maximum cable length can be increased by using repeaters. Refer to the documentation of the repeater manufacturer for further information.**

- A bus segment must be provided with cable termination (120 Ω) at both ends. These terminations must be connected directly between pin 3 and 7 in the connector.

-  ■ **The bus segment must be terminated at both ends.**
- **No more than two terminations must be provided on each bus segment.**
 - **Transmission faults can occur if operation is carried out without the correct termination.**

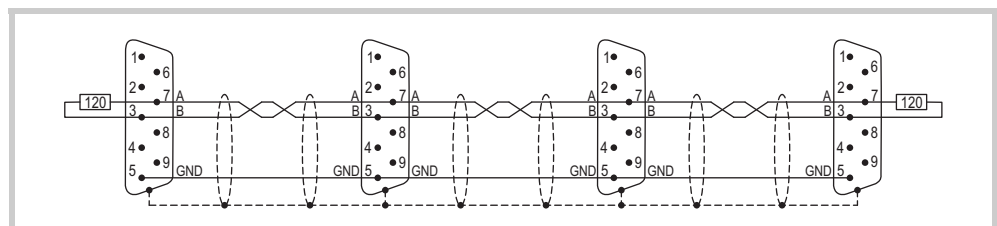




Fig. 18 Bus segment with four bus stations

5.4

Mounting

CAUTION	
	<p>Operational malfunctions</p> <p>Use of unsuitable or improperly prepared cables, as well as incorrect wiring will mean that neither the values stated in the technical data nor the electromagnetic compatibility (EMC) can be ensured.</p> <ul style="list-style-type: none">▶ Only use cables prepared by specialists.▶ The cables used must be prepared according to the interface description in this document.▶ The wiring instructions for the relevant interface must be observed when wiring the device.▶ Any generally applicable regulations and standards must be fulfilled.

CAUTION	
	<p>Device condensation</p> <p>If the device is or was exposed to climatic changes (temperature fluctuation, air humidity) moisture can form on or in the device (device condensation). In this case, there is a risk of short-circuit.</p> <ul style="list-style-type: none">▶ The device must not be switched on when device condensation is present.▶ If condensation is present on the device, or if it was exposed to temperature fluctuations, it must be allowed to adjust to room temperature (do not expose the device to the direct heat of heating devices) prior to commissioning.

1 Check the device for damage in transit.



The device must only be installed and commissioned in perfect technical condition and in compliance with this document.

2 Mount the device in the control cabinet, control panel or the control desk. See Chapter 5.4.1 Mounting the device, 39.

3 Connect the device as required.


- Follow the instructions on wiring the relevant interface. See Chapter 5.3 Cable preparation, 23.




The device is not provided with an On/Off switch. If the power supply is not provided with a switch, the device will start up (boot) as soon as it is connected to the power supply.

5.4.1

Mounting the device

 **An additional set of retaining brackets is required for mounting in accordance with IP65 and for use in potentially explosive atmospheres. Please contact your supplier.**

- 1 Select the mounting position of the device as described in Chapter 5.2.1 Requirements for the mounting position,  22.
- 2 Prepare a mounting cutout for the device at the selected position:
 - Mounting cutout:
 - 5.7" devices: $198 \times 142 \text{ mm } (\pm 1 \text{ mm})$
 - 8.4" devices: $261 \times 194 \text{ mm } (\pm 1 \text{ mm})$
 - 10.4" devices: $329 \times 238 \text{ mm } (\pm 1 \text{ mm})$
 - Material thickness at the mounting cutout 2...5 mm

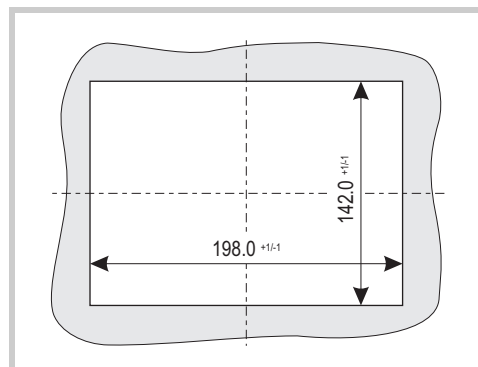


Fig. 19 Mounting cutout for 5.7" devices

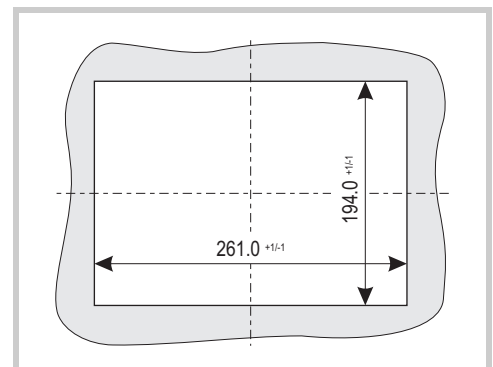


Fig. 20 Mounting cutout for 8.4" devices

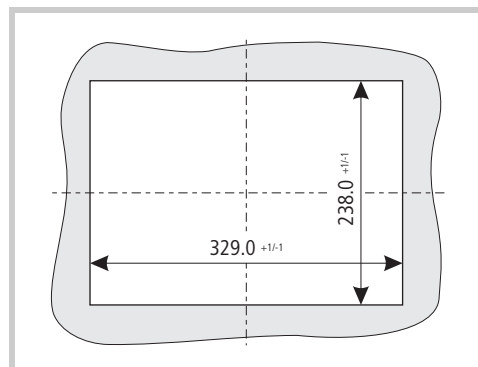



Fig. 21 Mounting cutout for 10.4" devices

5 Installation

5.4 Mounting

- 3 Insert the sealing strip supplied in the groove (A) on the rear of the device front plate and cut it so that the joint is tight.

CAUTION	
	<p>Poor sealing</p> <p>Poor sealing resulting from the twisting of the sealing strip or due to a gap between the ends of the sealing strip.</p> <ul style="list-style-type: none">▶ The join of the sealing strip must be positioned on the bottom of the device.▶ Do not twist the sealing strip when it is inserted.▶ Cut the sealing strip to a suitable length so that the joint is tight.

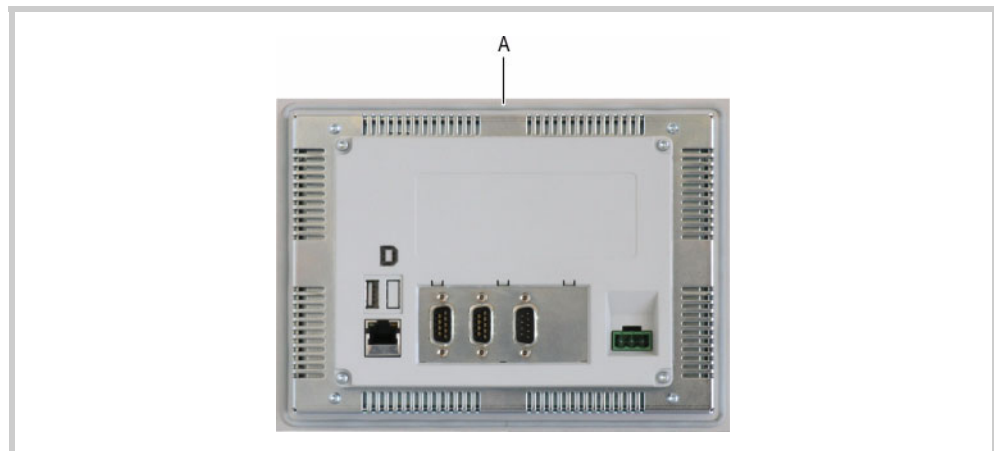


Fig. 22 Groove for sealing strip (A)

- 4 Fit the supplied threaded pins in the retaining brackets beforehand.

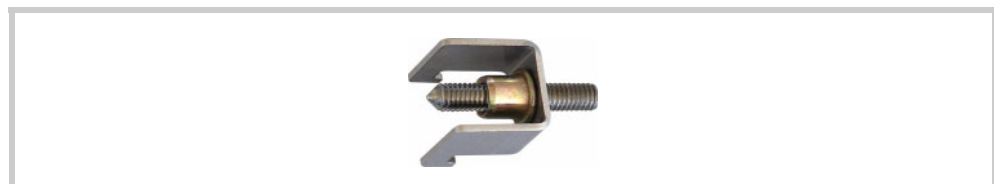



Fig. 23 Threaded pin pre-fitted in a retaining bracket

- 5 Fit the device from the front into the mounting cutout.
- 6 Clip on the retaining brackets in the recesses provided for them on the device as shown below and fix the device by tightening the threaded pins until the front of the MICRO PANEL is flush with the surface of the control cabinet.

CAUTION	
	<p>Mechanical damage to the device</p> <p>Tightening the threaded pins too tightly may damage the device.</p> <ul style="list-style-type: none">▶ Tighten threaded pins with a max. tightening torque of 0.2 Nm.

 The positions of the retaining brackets depend on the mounting requirements.

- Standard mounting:
 - Top and bottom of the device:
Fit one retaining bracket each at the left and right fixing position

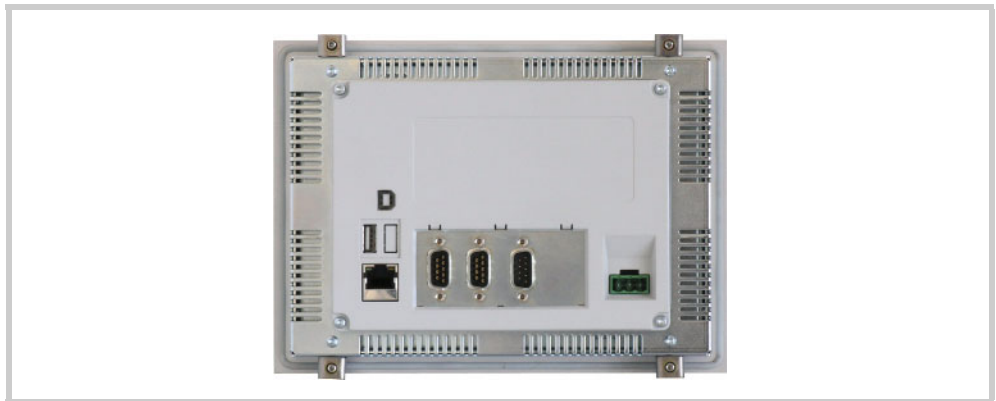


Fig. 24 Devices with four retaining brackets (do not meet IP65 requirements)

- Devices which must be mounted in accordance with IP65 or used in potentially explosive atmospheres:
 - Top and bottom of the device:
One retaining bracket at each of the fixing positions (left, right and in the center)
 - Left and right on the device:
One retaining bracket each at the central fixing position

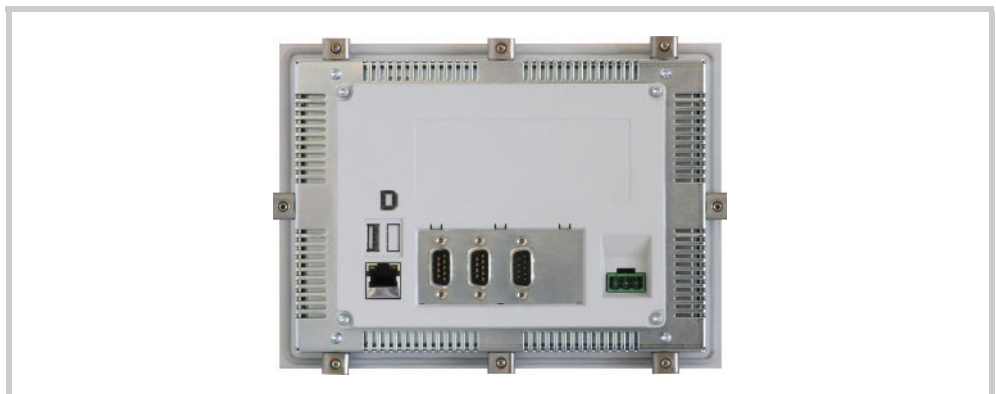



Fig. 25 Devices with eight retaining brackets (meet IP65 requirements)

5 Installation
5.4 Mounting

6 Operation

6.1 Safety regulations

 Read Chapter 3 Safety regulations, 11 before working with the device. This contains important information for your personal safety.

CAUTION



Sensitive resistive touch surface

Damage to the resistive touch due to the use of pointed or sharp objects.

- ▶ Only activate the resistive touch with your finger or a stylus.
- ▶ When wearing gloves, ensure that these are clean. They must not be covered with abrasive dust or sharp particles.

CAUTION



Device condensation

If the device is or was exposed to climatic changes (temperature fluctuation, air humidity) moisture can form on or in the device (device condensation). In this case, there is a risk of short-circuit.

- ▶ The device must **not** be switched on when device condensation is present.
- ▶ If condensation is present on the device, or if it was exposed to temperature fluctuations, it must be allowed to adjust to room temperature (do not expose the device to the direct heat of heating devices) prior to commissioning.

6 Operation

6.2 Starting the device

6.2

Starting the device

- 1 Energize the device.
 - The device will boot.
- 2 If the device does not boot up and/or if an error message appears while starting (booting) the device, see Chapter 7.4 Troubleshooting, 50.
- 3 Complete the following steps after initial commissioning (→ Document «MN05010007Z-EN System Description Windows CE»):
 - 3.1 Adjust the system settings of the device.
 - 3.2 Install the required application programs.



The lifespan of the backlight can be increased by reducing the brightness (→ Document «MN05010007Z-EN System Description Windows CE»).

6.3

Switching off the device

- 1 De-energize the device.

6.4

Inserting and removing an SD card

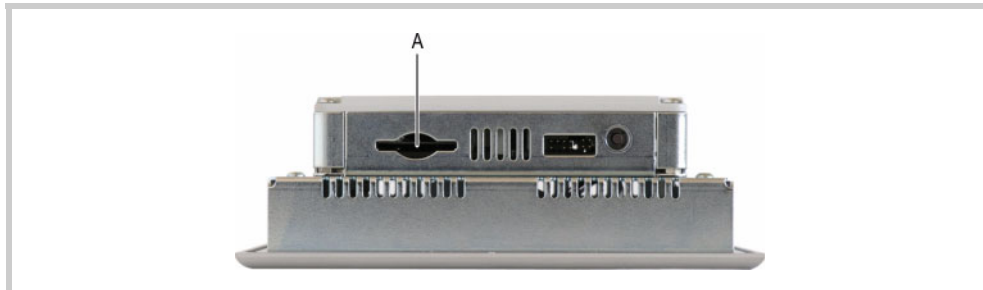


Fig. 26 SD slot (A)

CAUTION



Data loss

During a write operation, the SD card may lose data or may be destroyed if it is removed or if there is a power failure.

- ▶ Only insert the SD card when the device is in a de-energized state.
- ▶ Avoid write operations to SD cards. Reasons:
 - The number of write cycles possible on SD cards is limited.
 - A power failure during write operations will most likely lead to loss of data.
- ▶ Only remove the SD card when the device is in a de-energized state.
- ▶ Before switching off, ensure that no software write operations to the SD card are in progress.



Do not apply any force (SD cards are protected against reverse insertion).

Inserting the SD card

- 1 Push the SD card into the SD slot (A) until it snaps into position.

Removing the SD card

- 1 Push the SD card in the SD slot (A) all the way in.
 - This releases the lock mechanism and the SD card comes out of the SD slot a little.
- 2 Remove the SD card from the SD slot.

6 Operation

6.4 Inserting and removing an SD card

7 Maintenance and service

7.1 Safety regulations



Read Chapter 3 Safety regulations, 11 before working with the device. This contains important information for your personal safety.

7 Maintenance and service

7.2 Maintenance

7.2


Maintenance

Devices with resistive touch are maintenance-free. However, the following work may be necessary:

- Cleaning of the resistive touch if contaminated.
- Recalibration of the resistive touch if it does not respond correctly to touch operation.

7.2.1

Cleaning the resistive touch

CAUTION	
	<p>Cleaning the device</p> <p>Damage to the device due to the use of pointed or sharp objects or by liquids.</p> <ul style="list-style-type: none">▶ Do not use any pointed or sharp objects (e.g. knife) for cleaning.▶ Do not use any aggressive or abrasive cleaning agent or solvent.▶ Avoid any liquid entering the device (risk of short-circuit).

- 1 Clean the resistive touch carefully with a clean, soft, damp cloth.
 - With stubborn contamination, spray a little cleaning agent onto the damp cloth first.

7.2.2

Recalibrating a resistive touch

The resistive touch is already calibrated when delivered. However, it must be recalibrated if it does not respond correctly to touch operation. Touch calibration, see Document «MN05010007Z-EN System Description Windows CE».

7.2.3

Battery

The integrated battery cannot be exchanged. Lifespan, see Chapter 9.4 System, 57.

7.3

Service

7.3.1

Repairs

The device must only be opened by the manufacturer or by an authorized repair center.

Contact your local supplier or Eaton technical support for repairs.


Only the original packaging should be used for transporting the device.

7 Maintenance and service

7.4 Troubleshooting

7.4

Troubleshooting

Fault and possible cause	Corrective action
Device does not start (boot).	
Power supply interface does not have any power.	Check the power supply cable.
While the device is starting (booting), the following message appears:	
«<50> Touch is dirty or defect» (only appears if GALILEO is installed)	
Resistive touch is not correctly calibrated.	<ul style="list-style-type: none">■ Start (boot) the device.■ Calibrate touch (→ Document «MN05010007Z-EN System Description Windows CE»).
The threaded pins for mounting the device have been tightened too much.	Loosen the threaded pins (observe max. torque, → Chapter 5.4.1, 39).
Device is faulty.	Send in your device for repair.
Display remains or becomes dark.	
Backlight is switched off.	Check the function in the visualization software.
Backlight is faulty.	Send in your device for repair.
Touch does not react or does not react correctly to touch operation.	
Resistive touch is not correctly calibrated.	<ul style="list-style-type: none">■ Start (boot) the device.■ Calibrate touch (→ Document «MN05010007Z-EN System Description Windows CE»).
Touch is deactivated.	<ul style="list-style-type: none">■ Start (boot) the device.■ Activate touch (→ Document «MN05010007Z-EN System Description Windows CE»).
The icon  appears in the taskbar.	
Incorrect operation of the operating elements on the display.	Remove all objects from the area of the display.
The threaded pins for mounting the device have been tightened too much.	Loosen the threaded pins (observe max. torque, → Chapter 5.4.1, 39).
Device is faulty.	Send in your device for repair.

Tab. 20 Troubleshooting

8 Storage, transport and disposal

8.1 Safety regulations



Read Chapter 3 Safety regulations, 11 before installing and commissioning the device. This contains important information for your personal safety.

8.2 Storage

The ambient conditions for storage must be fulfilled. See Chapter 9.9 Ambient conditions, 60.

8.3 Transport

Damage to the device must be prevented during transport (use an appropriate packaging).

The ambient conditions must be fulfilled even when the device is transported. See Chapter 9.9 Ambient conditions, 60.



- 1 Check the device on arrival for damage in transit.

8 Storage, transport and disposal

8.4 Disposal

8.4

Disposal

 DANGER	
	<p>Explosive and toxic materials</p> <p>Any improper handling causes a risk of explosion due to the lithium battery soldered in the device.</p> <p>▶ Dispose of the device properly.</p>

Devices that are no longer used must be properly disposed of in accordance with the applicable national regulations or returned to the manufacturer or sales office.

Materials used in the device

Component	Material
Housing	Galvanized sheet steel
Front plate	Aluminum, Peraluman 101 anodized
Back plate	PC-GF
Resistive touch back panel	Glass with polyester foil
Battery	Lithium
Electronic components	Various

Tab. 21 Materials used in the device

Materials used in the packaging

Packaging	Material
External packaging	Cardboard
Internal packaging	<ul style="list-style-type: none">■ Cardboard with PE foil■ Plastic bag: Polyethylene (PE)

Tab. 22 Materials used in the packaging

9 Technical data

9.1 Dimensions and weights

9.1.1 5.7" devices

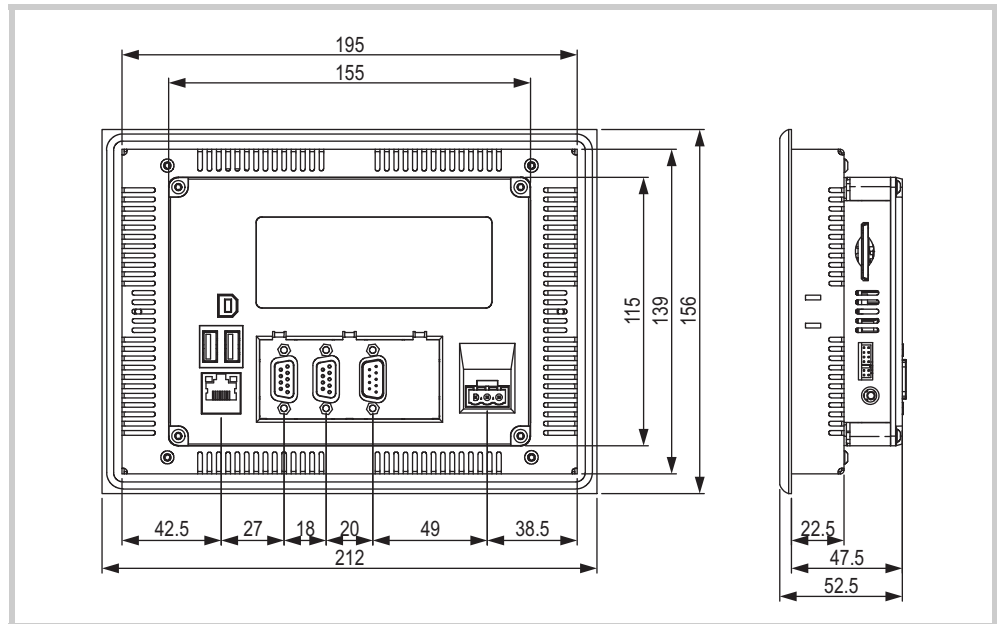


Fig. 27 Mechanical dimensions of the 5.7" devices in mm

Property	XV-152 5.7"
Height	156 mm
Width	212 mm
Depth	52.5 mm
Thickness of front plate	5 mm
Mounting depth	47.5 mm
Mounting cutout	198 mm × 142 mm (±1 mm)
Weight	Approx. 1.3 kg

Tab. 23 Dimensions and weights of the 5.7" devices

9 Technical data

9.1 Dimensions and weights

9.1.2

8.4" devices

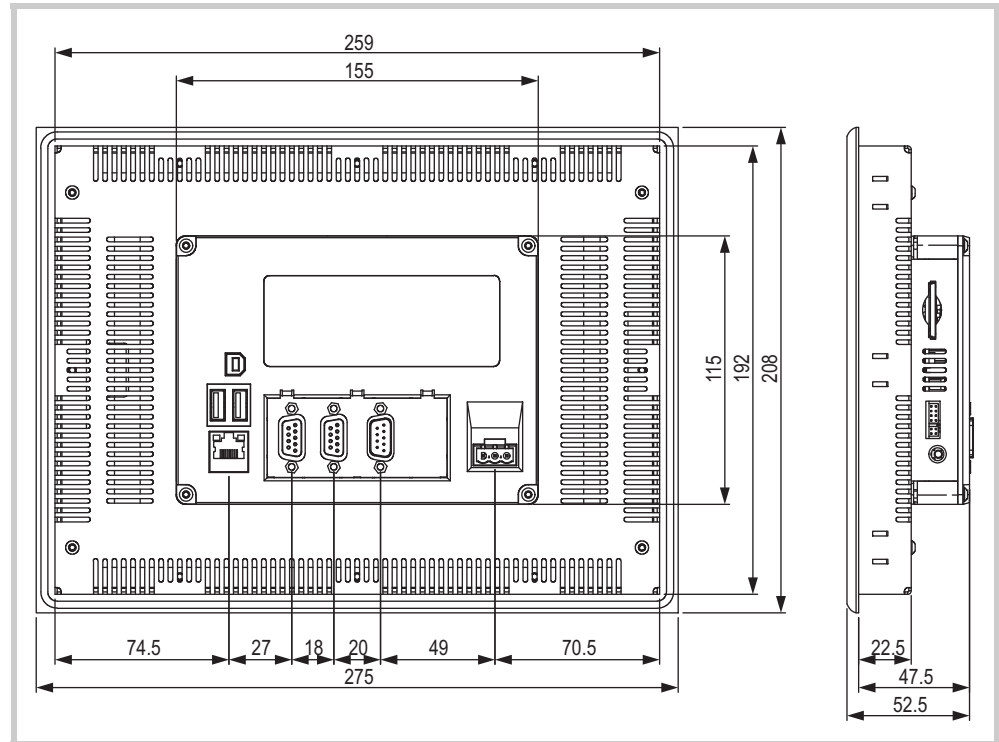


Fig. 28 Mechanical dimensions of the 8.4" devices in mm

Property	XV-152 8.4"
Height	208 mm
Width	275 mm
Depth	52.5 mm
Thickness of front plate	5 mm
Mounting depth	47.5 mm
Mounting cutout	261 mm × 194 mm (±1 mm)
Weight	Approx. 2.1 kg

Tab. 24 Dimensions and weights of the 8.4" devices

9.1.3

10.4" devices

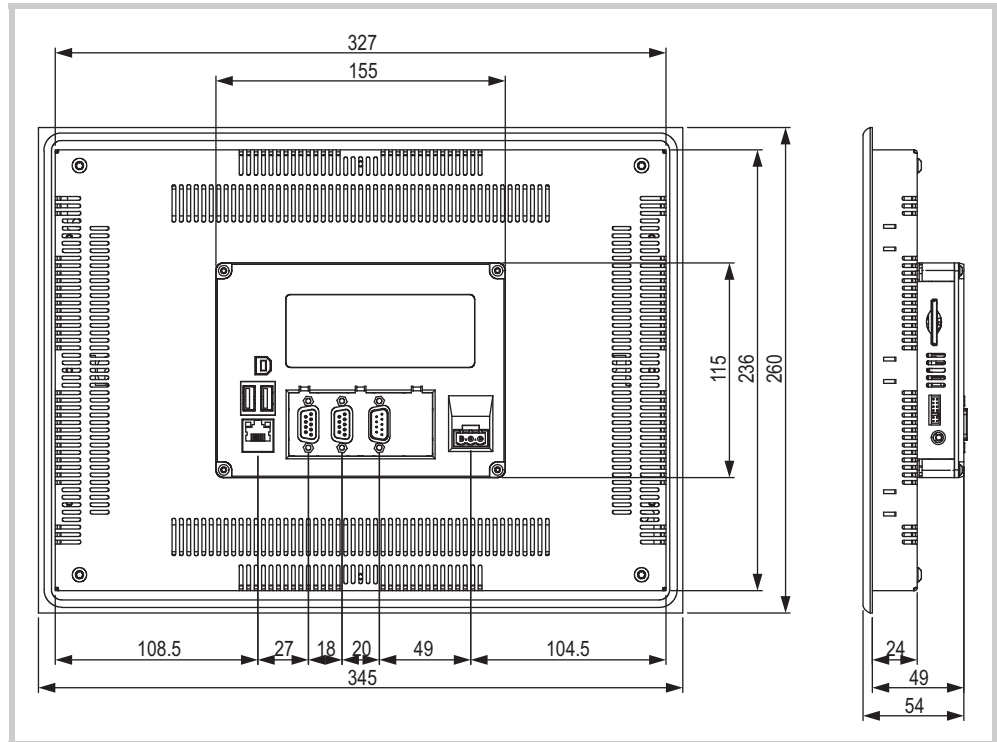


Fig. 29 Mechanical dimensions of the 10.4" devices in mm

Property	XV-152 10.4"
Height	260 mm
Width	345 mm
Depth	54 mm
Thickness of front plate	5 mm
Mounting depth	49 mm
Mounting cutout	329 mm × 238 mm (±1 mm)
Weight	Approx. 3.0 kg

Tab. 25 Dimensions and weights of the 10.4" devices

9 Technical data

9.2 Display

9.2

Display

Property	XV-152
Type	TFT-LCD
Resolution (W × H)	VGA (640 × 480 pixels)
Visible display area	
5.7" devices	115 mm × 86 mm (5.7" screen diagonal)
8.4" devices	170 mm × 128 mm (8.4" screen diagonal)
10.4" devices	211 mm × 158 mm (10.4" screen diagonal)
Color resolution	64k colors
Contrast ratio	Normally 300:1
Brightness	Normally 350 cd/m ²
Backlight	
Technology	LED, dimmable via software
Lifespan	Normally 40 000 h
Resistive touch back panel	Touch sensor (glass with foil)

Tab. 26 Display

9.3

Touch sensor

Property	XV-152
Type	Resistive touch
Technology	4-wire

Tab. 27 Touch sensor

9.4

System

Property	XV-152
Processor	RISC, 32-bit, 400 MHz
Internal memory	
DRAM	64 MByte
NAND Flash	64 MByte
NVRAM	125 KByte
NOR Flash	2 MByte
External memory	
SD memory card slot	1× SDA specification 1.00 Suitable for SD cards (not for SDHC cards or cards of newer standard)
Real-time clock (battery backup)	
Battery type	CR2032 (190 mA/h), maintenance-free (soldered)
Backup time in de-energized state	Normally 10 years

Tab. 28 System

9.5

Interfaces

Property	XV-152
Ethernet	100Base-TX / 10Base-T
USB Device	USB 2.0, not electrically isolated
Interfaces, depending on the device version:	
USB Host	USB 2.0 (1.5 / 12 Mbit/s), not electrically isolated
RS232 (System Port)	RS232, not electrically isolated
CAN	CAN, not electrically isolated
Profibus	Profibus, not electrically isolated, max. 1.5 Mbit/s
RS485	RS485, not electrically isolated
Power supply	→ Chapter 9.5.1, 58
DIAG	Only for service tasks
Jumper UPD/RUN	Only for service tasks

Tab. 29 Interfaces

9.5.1

Power supply

Property	XV-152
Rated voltage	24 VDC SELV (safety extra low voltage)
Permissible voltage	<ul style="list-style-type: none"> ■ RMS value: 19.2 ... 30.0 VDC (rated voltage -20 % / +25 %) ■ Absolute with ripple: 18.0 ... 31.2 VDC ■ Battery operation: 18.0 ... 31.2 VDC (rated voltage -25 % / +30 %) ■ 35 VDC for a period < 100 ms
Voltage dips	<ul style="list-style-type: none"> ■ 10 ms from rated voltage (24 VDC) ■ 5 ms from undervoltage (20.4 VDC)
Power consumption	
5.7" devices	
Basic device	Max. 7 W
USB stations on USB host	Max. 2.5 W
Total	Max. 9.5 W
8.4" and 10.4" devices	
Basic device	Max. 12 W
USB stations on USB host	Max. 2.5 W
Total	Max. 14.5 W
Current consumption	
Continuous current	
5.7" devices	Max. 0.4 A (24 VDC)
8.4" and 10.4" devices	Max. 0.6 A (24 VDC)
Starting current inrush	1.5 A ² s
Protection against reverse polarity	Yes
Fuse	Yes (replacement only by the manufacturer or by an authorized repair center)
Potential isolation	No

Tab. 30 Power supply

9.6 Enclosure ratings

Property	XV-152
Front	IP65: Required accessories for mounting: ■ Additional set of retaining brackets (optional)
Rear	IP20

Tab. 31 Enclosure ratings

9.7 Agency approvals and standards

Property	XV-152
EMC	2004/108/EC
Explosion protection	II 3D Ex II T70°C IP5x (ATEX 94/9/EC): ■ Zone 22, category 3D: Required accessories for mounting: - Additional set of retaining brackets (optional)
UL	UL 508 (approval pending): File no. E205091

Tab. 32 Agency approvals and standards

9.8 Applicable standards and regulations

Property	XV-152
EMC (in relation to CE)	
EN 61000-6-2	Immunity for industrial areas
EN 61000-6-4	Emission for industrial environments
EN 61131-2	Programmable logic controllers, equipment requirements and tests
Explosion protection (in relation to CE)	
ATEX 94/9/EC: Zone 22, Category 3D (II 3D Ex II T70°C IP5x):	
EN 60079-0	Electrical apparatus for explosive gas atmospheres
EN 61241-1	Electrical apparatus for use in the presence of combustible dust
EN 13463	Non-electrical equipment for use in explosion hazardous areas

9 Technical data
9.9 Ambient conditions

Property	XV-152
Safety	
EN 60950	Safety of information technology equipment
UL 508	Industrial Control Equipment
Product standards	
EN 50178	Electronic equipment for use in power installations
EN 61131-2	Programmable logic controllers, equipment requirements and tests

Tab. 33 Applicable standards and regulations

9.9

Ambient conditions

Property	XV-152
Temperature	
Operation	0 ... 50°C
Storage / Transport	-20 ... 60°C
Relative air humidity	10 ... 95%, non-condensing
Vibration	According to IEC68-2-6
Shock	According to IEC68-2-27
Fall test	According to IEC68-2-32

Tab. 34 Ambient conditions