


Series STEP12

The Spartan Scientific STEP12 Steppervalve is a self-contained Media Separated Electronic Proportional Flow Control Valve designed for highly accurate electronically controlled variable flow control of inert fluids and gases. Using analog or digital signal inputs to produce a linear variable flow output, this combination of a stepper motor, valve body with controller circuit has more than 1,500 positions through its valve stroke which can be dialed down to the step, creating reliable and repeatable flow rates from 0 to 30 GPM (water) @ 150 PSI. The valve features a built-in electronic control that accommodates either open or closed loop control by use of electronic signal input of either 4 to 20 mA, 0 to 10 Volt DC. Valve standard operating voltages are 12 or 24 VDC. The STEP12 has a separating diaphragm that maintains dry mechanical movement and is designed for long life and high flow. The diaphragm is designed with a specialized convolution and elliptical flow tip producing a linear flow versus valve stroke position. The STEP12 valve body is available in 1/4", 3/8" or 1/2" port sizes with a maximum flow orifice of 12.5mm. Featuring multi orientation mounting and the quick connect M12 connector mates to the valve for a sure environmentally resistant enclosure to NEMA 4/IP 65. This energy saving valve uses voltage to move into position and needs only 60mA when position is found and maintains a steady state. For fast troubleshooting, the on-board indicator LED (RGB) light ring displays status of the device.


Dimensional Data


ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED

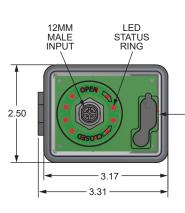

POTENTIOMETER ADJUSTMENTS



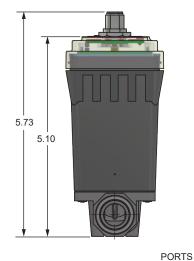

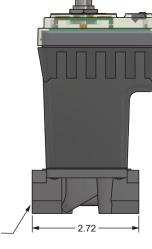


FEATURES

- Highly accurate electronic variable flow control of inert fluids and gases
- Combination stepper motor, valve body with controller circuit accommodates more than 1,500 valve stroke positions
- Built-in electronic control accommodates open or closed loop with signal input



0.55

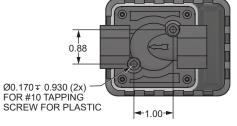



8510 Foxwood Ct. • Youngstown, Ohio 44514
 PH: (855)629-4648 • Fax: (330)758-3314
 www.spartanscientific.com
 www.comoso.com



Series STEP12

Technical Data

Function:	2-Way, 2-Position; Media separated, Proportional flow, Stepped controlled valve, Open or Closed loop	Mounting:	On pipe or (2x) 0.170 blind holes for #10 tapping screw	
Port Size:	1/4", 3/8" and 1/2" NPT	Wetted Materials:	Elastomers: FKM, NBR, EPDM	
Orifice Sizes / Flow Factor:	1/2" / 2.45 Cv		(Available in FDA compatible and NSF versions, Consult Factory) Valve Body: Glass-Filled Nylon Zytel77G33L Flow Control Element/Seat Coupling: 316 Stainless Steel	
Pressure Range:	0 to 150 psi			
Flow Range:	0 to 30 gpm		Port Screen: 300 Series Stainless Steel	
Temp. Range:	Fluid Max.: +60°C Ambient +10° to +50°C	Electronics:	Control Signal: 0 to 10 volts or 4 to 20 mA Feedback Control: 0 to 10 volts or 4 to 20 mA	
Media:	All fluids and gases compatible with wetted materials	Packaged Weight:	Connection: M12 Round Connector, Code A 1.7 lbs.	
Environment Protection:	IP65 (IEC 144), NEMA 4 Dust-tight and water resistant			

Function

Analog Inputs - The two separate analog inputs are **Control Input** and a **Feedback Input**. These inputs can operate as voltage inputs with an input range of 0 to 10 VDC or operate as a current input with an input range of 4 to 20 mA. Analog inputs are configured at the factory and must be specified at ordering time. See the **"How To Order"** section for specific ordering information.

ANALOG INPUTS	INPUT TYPE
Control Input	Voltage Input: 0 to 10 VDC or Current Input: 4 to 20 mA
Feedback Input	Voltage Input: 0 to 10 VDC or Current Input: 4 to 20 mA

Analog Outputs - The STEP12 valve can be controlled by the analog outputs of a PLC by providing either voltage or current signal to operate the device.

Potentiometer Adjustments - Two single turn potentiometers are located under the black rubber cover. **Pot** "S" is for controlling the Speed that stepper opens or closes. **Pot** "D" is for controlling the dither or hysteresis. This pot is used with how the STEP12 operates when the device is in Closed loop mode and is based on the difference between the Control and Feedback inputs.



Modes - The device operates in Open Loop or Closed Loop mode based on the input level of the Closed or Open Loop Signal which is pin 5 of the M12 connector.

SWITCH CONTROL STATE	OPERATION
0 VDC	Device is in Open Loop Mode
24 VDC	Device is in Closed Loop Mode

35 30 25 20 GPN 15 10 5 0 0 2 3 6 5 7 8 4 9 10 Input Voltage 75 PSI 100 PSI 125 PSI -----150 PSI

Average Flow vs Input Voltage - 1/2" NPT Port

Additional Information -

- Test voltage parameters 0.5 to 9.5 volts DC with step range 0 to 1500.
- Slope and Volumetric Output will vary with pressure input.
- Media used is water at 70°F.

*The data contained in this document is the property of Canfield Industries, Inc., Canfield Connector, Inc, and Spartan Scientific, Inc. and is not to be reproduced or redistributed without the expressed written consent of Canfield Industries, Inc.





Series STEP12

Hook-up


Pin Configuration

The male M12 connector powers the device providing the Control and Feedback Inputs.


12mm Male Input A-Coding	

PIN	FUNCTION
1	Input Voltage
2	Feedback Signal
3	Ground 🕀
4	Control Signal
5	Closed or Open Loop Signal

Mating Cordsets
12mm female molded locking connectors

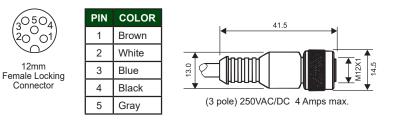

How To Order

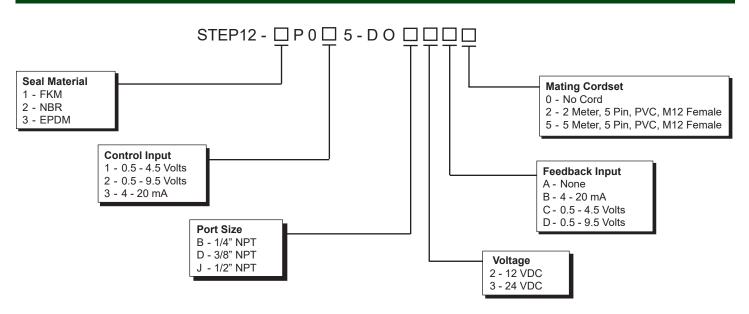

8510 Foxwood Ct. • Youngstown, Ohio 44514

PH: (855)629-4648 • Fax: (330)758-3314

www.spartanscientific.com

Order Example: STEP12-1P015-DOB2B2 FKM, 0.5 - 4.5 Volts, Glass Filled Nylon, 1/4" NPT, 12 VDC 4 - 20 mA, 2 Meter Cordset



92

PROPORTIONA